

Shelfology
Certified Rad™

Designed & Crafted
By Radically Talented
Humans Right Here In
The U.S. Of Awesome_

→ Patent
Pending
✓ Design.

⚡ Lightning
Fast Lead
→ Times.

Arlo Desk

Install Guide







Installation
Difficulty
Rating (1-10)

4

Table of Contents	Page
Installation Steps	004
Warnings	006
Rad Tips	007

Required
Tools

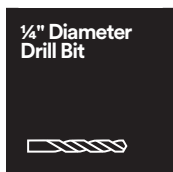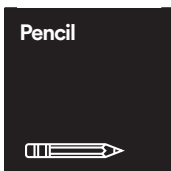

Optional
Tools





Meet Arlo—the perfect homework station, craft corner, or kid command center for coloring outside the lines, building big ideas, and surviving daily kid life. **Designed & Crafted By Radically Talented Humans Right Here In The U.S. Of Awesome.**

What's In The Box

What You'll Need

Arlo Desk 1x 	Arlo Desk Leg 2x 	Innate Radness Done! 	+
Arlo Desk Cleat 1x 	Truss Head Fastener Set 1x 	+	+
Pan Head Fastener Set 1x 	Wall Anchor Set 1x 	+	+
+	+	+	+


DESIGNED & CRAFTED BY RADICALLY TALENTED HUMANS RIGHT HERE IN THE U.S. OF AWESOME.

LIGHTNING FAST LEAD TIMES.



Installation Steps


001

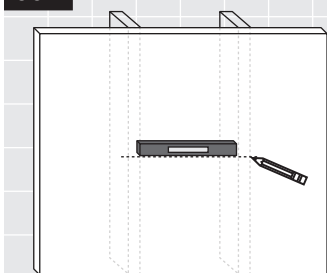

Determine where you want to install your Arlo Desk. Locate the wall studs or blocking behind the mounting surface. Using a measuring tape and level, mark a line on your wall approximately $\frac{3}{4}$ " higher than the leg height of your desk. This line indicates where to align the fastener holes on the cleat.


See **Rad Tip** ① on page 7 for more information on studs and blocking. For masonry installs, see **Rad Tip** ②.

002

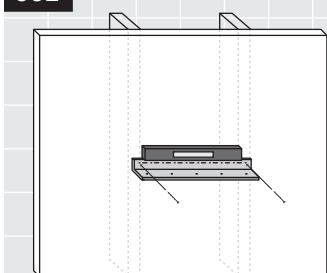

Position the cleat against the wall with the mounting holes aligned with the wall studs and the horizontal line you just drew. Level the cleat, then secure it to the wall using the appropriate fasteners for your wall type.


003

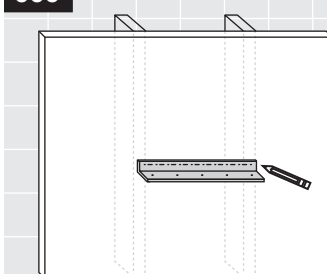

Double check the cleat position on your wall and adjust if necessary. Mark all fastener holes and slots with a pencil. Once every fastener location has been marked, uninstall both fasteners and remove your cleat from the wall.




004

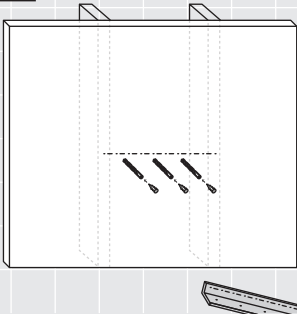

Predrill each drywall anchor location roughly every six inches. Use a $\frac{1}{4}$ " drill bit to avoid breaking drywall anchors.


Install a drywall anchor in each of these pre-drilled locations. If you are using your own anchors, we recommend Toggler brand for best results. Stud locations should not be pre-drilled. Drywall anchors should be installed flush with the drywall surface.

005

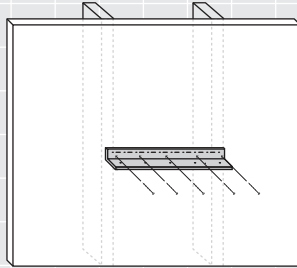


Replace the cleat and install a truss head fastener into every location crossing a stud, blocking, or wall anchor.

006

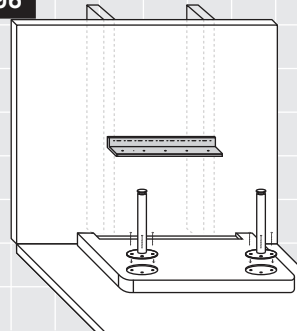

Position the legs over the notches in the desktop and align the mounting holes. Secure the legs to the underside of the desktop using the provided pan head fasteners. Tighten firmly.

007

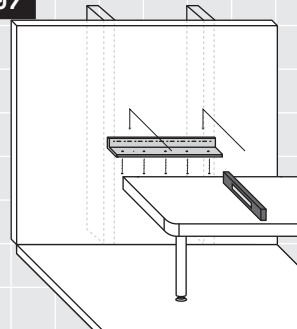

With the cleat securely mounted, place the desktop onto the cleat, making sure it is fully seated and properly aligned. Fasten cleat to desktop.

Place a level on the desktop and turn the foot clockwise or counterclockwise to raise or lower the desk until the foot makes firm contact with the floor and the desktop is level from front to back. The foot provides approximately 1" of adjustment to accommodate uneven floors.

That's it! Reach out to a Shelf Geek today if you need any further assistance.





Whoa, you made it! We are vicariously stoking for you right now. Post your sweet shelfie on Instagram now!



@shelfology
#radshelfie

Need a hand? Speak with a Shelf Geek at 949.244.1083 or hello@shelfology.com today.

How did we do? You'll get an email soon asking for a product review, and we'd be stoked if you oblige. You rock in advance!

Warnings



① Correct Install Required For Safe Use

1.1 Desks must be correctly installed into studs or wall blocking. Failure to do so may result in sagging desks, falling objects, or serious injury.

② Adhere To The Capacity Rating Of Your Specific Product

2.1 Every Shelfology product has been engineered for use with specific capacities. Failure to follow our specified capacity ratings may result in sagging desks, falling objects, or serious injury.

③ California Proposition 65 Warning

3.1 This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. Don't eat this product. If you live outside of California, do whatever you want. For more boring information, visit www.p65warnings.ca.gov.

④ Not For Use In Wet Environments


4.1 Powder coated carbon steel does not equal waterproof. If water has direct and constant contact with the product, like in a shower or outdoors, it will rust. Shelves installed in these conditions are not covered by our warranty.

Rad Tips




Arlo Desk Install Guide Rad Tips

① Fasten Into All Studs & Blocking The Desk Crosses



1.1 Studs are the vertical 2x4 boards that make up the bones of your walls. They provide solid structure for your desk to attach to.




1.2 Blocking is typically added later between studs in the wall for additional support to mount desk to, and is usually made from 2x4 or 2x6 lumber.



1.3 For a contractor grade install with best substrate strength, install blocking along the length of your desk.


② Masonry Installation



2.1 Hold product in position and mark hole placements. Drill each marked location with a 1/4" diameter masonry drill bit. Drill at least 2 1/2" deep to allow for the 2 1/2" wall fastener.



2.2 Using a hammer, tap masonry anchor into hole, flush with wall surface.



2.3 Hold product in position, and install masonry fasteners into anchors.

DESIGNED & CRAFTED BY RADICALLY TALENTED
HUMANS RIGHT HERE IN THE U.S. OF AMESOME.

LIGHTNING FAST
LEAD TIMES

Need a hand? Speak with a Shelf Geek at 949.244.1083 or hello@shelfology.com today.

How did we do? You'll get an email soon asking for a product review, and we'd be stoked if you oblige. You rock in advance!

Call	949.244.1083
Email	hello@shelfology.com
Shop	www.shelfology.com
Visit	156 N 2nd E Rexburg, ID 83440
Social	@shelfology

