

Shelfology
Certified Rad™

Designed & Crafted
By Radically Talented
Humans Right Here In
The U.S. Of Awesome_

→ Patent
✓ Pending
Design.

⚡ Lightning
→ Fast Lead
Times.

Brently Box Shelf

Install Guide





Installation
Difficulty
Rating (1-10)

5

Table of Contents	Page
Installation Steps	004
Warnings	006
Rad Tips	007

Required
Tools

Drill 	Level 
Pencil 	Measuring Tape 

Optional
Tools

Stud Finder 	1/4" Diameter Drill Bit 
--	---

+

+

+

+

+

+

+



+




START ↓↓

You just scored
Brently: a simple steel
box shelf that turns
everyday storage into
wall-worthy design.
Designed & Crafted
By Radically Talented
Humans Right Here In
The U.S. Of Awesome.

What's In The Box

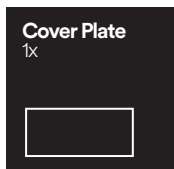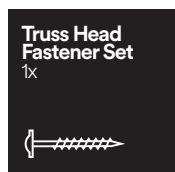


What You'll Need

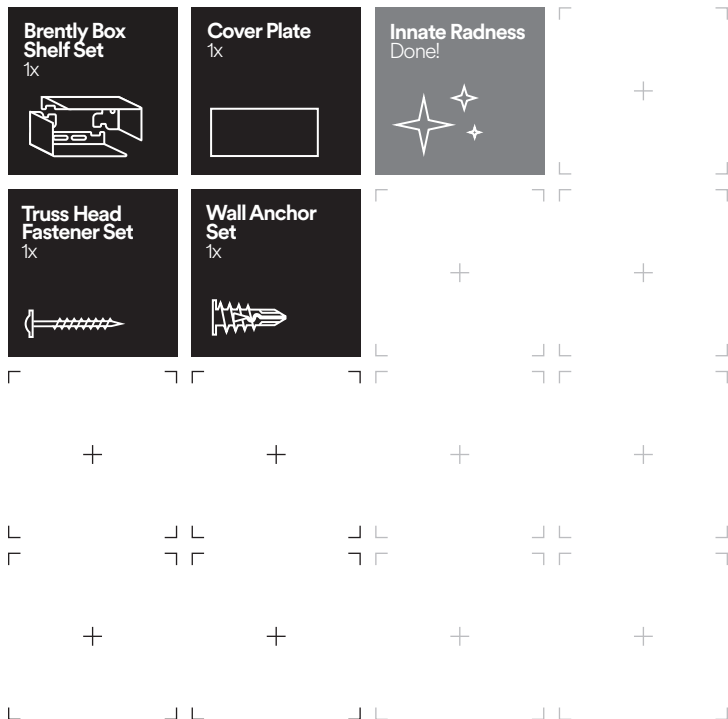



Installation Steps


001

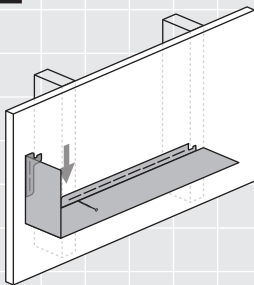

Yo! Here we go! Position one half of your shiny new shelf on the wall in the desired location and orientation. Brently is designed to function whether oriented vertically or horizontally.


Use a drill to fasten either the far left or right hole to the wall. For more information on what type of fastener is right for your install, see **Rad Tip ④** on page 7. For masonry installs, see **Rad Tip ③**.

002

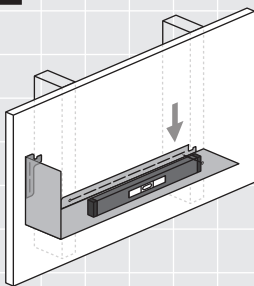

Level your shelf, then set another fastener in the next stud or opposite side with your drill.


003

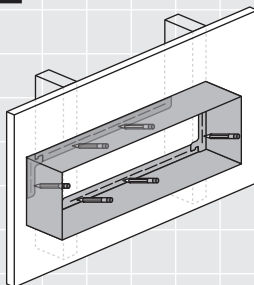

Align the other half of your shelf on the wall, and repeat steps 1 and 2. Double check the shelf position on your wall and adjust if necessary. Mark all fastener holes with a pencil. Once every fastener location has been marked, uninstall both fasteners and remove your shelf from the wall. Take a swig of your favorite soda or non-alcoholic brew.




004

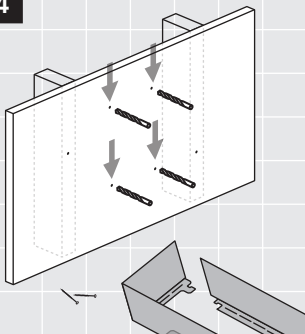


Predrill each drywall anchor location. Use a $\frac{1}{4}$ " drill bit to avoid breaking drywall anchors.

005

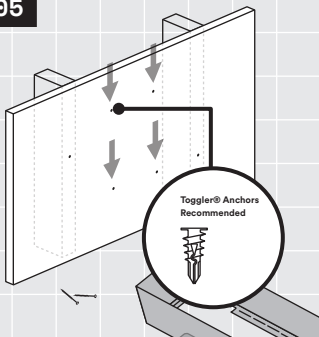


Install a drywall anchor in each of these pre-drilled locations. If you are using your own anchors, we recommend Toggler brand for best results. Stud locations should not be pre-drilled. Drywall anchors should be installed flush with the drywall surface.

006

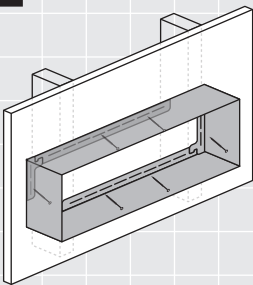

Replace the shelf and install a fastener into every location crossing a stud or blocking or using a wall anchor. For information on using the proper fastener, see **Rad Tip ④**.

007

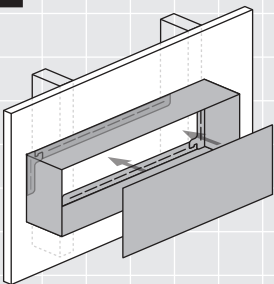

Position magnetic coverplate into place. Make a final inspection of your shelf. Check for shelf sag, confirm shelf is correctly secured to wall. See **Rad Tip ②** on page 7.

Stand back and relax, you did it! Give your cat a celebratory fist bump, if present. Gently place your Golden Girls™ box collection on shelf and admire!



Whoa, you made it! We are vicariously stoking for you right now. Post your sweet shelfie on Instagram now!



@shelfology
#radshelfie

Need a hand? Speak with a Shelf Geek at 949.244.1083 or hello@shelfology.com today.

How did we do? You'll get an email soon asking for a product review, and we'd be stoked if you oblige. You rock in advance!

Warnings



① Correct Install Required For Safe Use

1.1 Shelves must be correctly installed into studs or wall blocking. Failure to do so may result in sagging shelves, falling objects, or serious injury.

② Adhere To The Capacity Rating Of Your Specific Shelf

2.1 Every Shelfology shelf has been engineered for use with specific capacities. Failure to follow our specified capacity ratings may result in sagging shelves, falling objects, or serious injury. Please reference the Brently Spec Sheet for more information.


③ California Proposition 65 Warning

3.1 This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. Don't eat this shelf. If you live outside of California, do whatever you want. For more boring information, visit www.p65warnings.ca.gov.


④ Not For Use In Wet Environments

4.1 Powder coated carbon steel does not equal waterproof. If water has direct and constant contact with the shelf, like in a shower or outdoors, it will rust. Shelves installed in these conditions are not covered by our warranty.

① Fasten Into All Studs & Blocking The Shelf Crosses



1.1 Studs are the vertical 2x4 boards that make up the bones of your walls. They provide solid structure for your shelves to attach to.




1.2 Blocking is typically added later between studs in the wall for additional support to mount shelves to, and is usually made from 2x4 or 2x6 lumber.




1.3 For a contractor grade install with best substrate strength, install blocking along the length of your shelf.

② Using Shims With Your Shelf



2.1 If your wall is not straight, use shims to ensure your shelf is installed straight across the wall face and square to the wall.


③ Masonry Installation



3.1 Hold shelf in position and mark hole placements. Drill each marked location with a 1/4" diameter masonry drill bit. Drill at least 2 1/4" deep to allow for the 2 1/2" wall fastener.




3.2 Using a hammer, tap masonry anchor into hole, flush with wall surface.




3.3 Hold shelf in position, and install masonry fasteners into anchors.

④ How To Choose Your Fastener Type

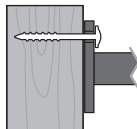

4.1 Truss Head: Use the supplied truss head style wood fasteners in areas that cross studs or blocking with holes and channels that are not countersunk.

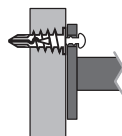

4.2 Pan Head: For drywall or masonry, use the supplied pan head fasteners with the included drywall or masonry anchors.

Need a hand? Speak with a Shelf Geek at 949.244.1083 or hello@shelfology.com today.

How did we do? You'll get an email soon asking for a product review, and we'd be stoked if you oblige. You rock in advance!

Call	949.244.1083
Email	hello@shelfology.com
Shop	www.shelfology.com
Visit	156 N 2nd E Rexburg, ID 83440
Social	@shelfology

