

Shelfology
Certified Rad_

Made In The U.S.A.
By Woodworkers, For
Woodworkers_

|
→ Patent
Pending
Design.

|
⚡ Lightning
Fast Lead
Times.

|
★ Made
In The
USA.

Study Utility Bracket

Install Guide










Installation
Difficulty
Rating (1-10)

5

Table of Contents	Page
Installation Steps	004
Warnings	006
Rad Tips	007

Required
Tools

Optional
Tools

<p>Drill</p> 	<p>Level</p> 	<p>Innate Radness Done!</p> 		
<p>Pencil</p> 	<p>Measuring Tape</p> 			

START ↓↓




Meet Study Utility Bracket: the strongest, sleekest, most hardcore utility bracket in the game. Made in-house by us in the United States of Awesome. Rad!



Study Utility Bracket Install Guide
Introduction

What's In The Box

What You'll Need

<p>Study Utility Bracket 1x</p> 	<p>Matching 1½" Wall Fastener Set 1x</p> 	<p>Your Favorite Soda 2x</p> 	
			+
			+
			+
			+
			+



CERTIFIED
RAD™


MADE IN THE
U.S. OF A.

LIGHTNING FAST
LEAD TIMES




Installation Steps

001

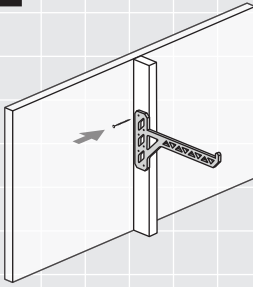


Yo! Here we go! Your Study Bracket is designed to be installed directly onto wall studs. See **Rad Tip** ① on page 7 for more information. Position your bracket on a stud or post, then install a wall fastener into an upper fastener hole location.

002

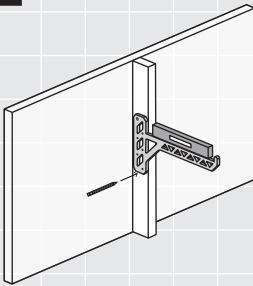

Straighten your bracket using a level. Mark a lower fastener hole location with a fastener tip or a pencil. Install a second wall fastener into this location, then recheck for level.

003

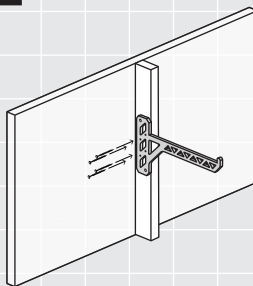


Install the remaining fasteners into remaining fastener holes. Your first Study bracket is installed! Crack open and take a swig of your favorite non-alcoholic brew.

If you are installing multiple brackets to support a shelf slab, continue on to the rest of the steps. If not, skip to step 6.




004

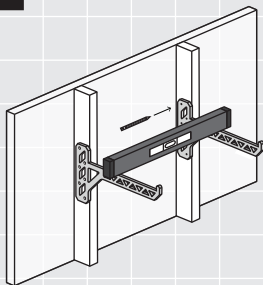


To mount additional brackets aligned with the first, use a level to align both brackets and **repeat steps 1–3** with the second bracket. See **Rad Tip** ② and ③.

005

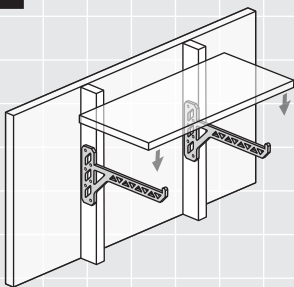

Position shelf slab between tabs on top bracket surface. See **Rad Tip** ④ on page 7 for shelf surface recommendations.

006

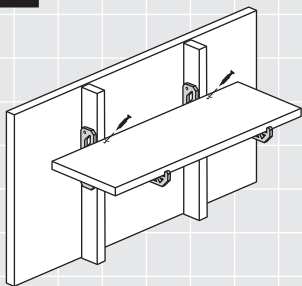

Drill a pilot hole through shelf slab into the stud at a 45° angle. Install set screws through shelf into stud to lock slab into position. You are done. Stand back, finish off your soda, and shout “Stout, Sturdy, Study!”

If you need more help, please reach out to a shelf geek today.

hello@shelfology.com
949.244.1083

CERTIFIED
RAD™

MADE IN THE
U.S. OF A.

LIGHTNING FAST
LEAD TIMES



Whoa, you made it! We are vicariously stoking for you right now. Post your sweet shelfie on Instagram now!



@shelfology
#radshelfie

Need a hand? Speak with a Shelf Geek at 949.244.1083 or hello@shelfology.com today.

How did we do? You'll get an email soon asking for a product review, and we'd be stoked if you oblige. You rock in advance!

Warnings



① **Correct Install Required For Safe Use**

1.1 Brackets must be correctly installed into studs. Failure to do so may result in sagging brackets, falling objects, or serious injury.

② **Adhere To The Capacity Rating Of Your Specific Bracket**

2.1 Every Shelfology shelf has been engineered for use with specific capacities. Failure to follow our specified capacity ratings may result in sagging shelves, falling objects, or serious injury. Please reference the Study Utility Bracket Spec Sheet for more information.

③ **California Proposition 65 Warning**

3.1 This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. Don't eat this bracket. If you live outside of California, do whatever you want. For more boring information, visit www.p65warnings.ca.gov.

④ **Not For Use In Wet Environments**


4.1 Powder coated carbon steel does not equal waterproof. If water has direct and constant contact with the bracket, like in a shower or outdoors, it will rust. Brackets installed in these conditions are not covered by our warranty.

GET MORE RADMESS NOW AT SHELFOLGY.COM
NEED A HAND? 949.244.1083 // HELLO@SHELFOLGY.COM

Rad Tips



① Fasten Into All Studs & Blocking The Shelf Crosses

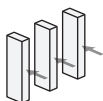


1.1 Study brackets are designed to be mounted on a fixed stud, post, or other structural surface. Drywall is not structural, and will not support this bracket.

② Using a Longer Level




2.1 You can turn a short level into a long one by laying it on a straight object like a yard stick. Just hold it on the wall with your bubble level on top and measure!

③ Bracket Spacing



3.1 Bracket spacing is up to you. It's part of Study's insanely cool aesthetic. With that said, these brackets should never be more than 48" apart. Saggy shelves suck!

④ Study As a Shelf System

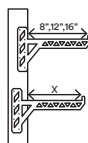


4.1 To accommodate a full 8, 12, or 16 inch deep slab, be sure the front surface of the vertical mounting segment is flush with the stud or post.

CERTIFIED
RAD™

MADE IN THE
U.S. OF A.

LIGHTNING FAST
LEAD TIMES

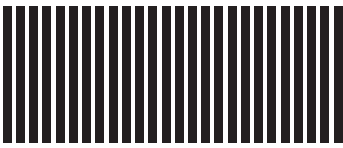

Need a hand? Speak with a Shelf Geek at 949.244.1083 or hello@shelfology.com today.

How did we do? You'll get an email soon asking for a product review, and we'd be stoked if you oblige. You rock in advance!

Call 949.244.1083
Email hello@shelfology.com
Shop www.shelfology.com
Visit 156 N 2nd E Rexburg, ID 83440
Social @shelfology



ON THE WALL
DESIGNS BY OFF THE WALL DESIGNERS™

