Shelfology Certified Rad_

Designed & Crafted By Radically Talented Humans Right Here In The U.S. Of Awesome_




Tromso FM Install Guide





Table of Contents	Page
Installation Steps	004
Warnings	006
Rad Tips	007

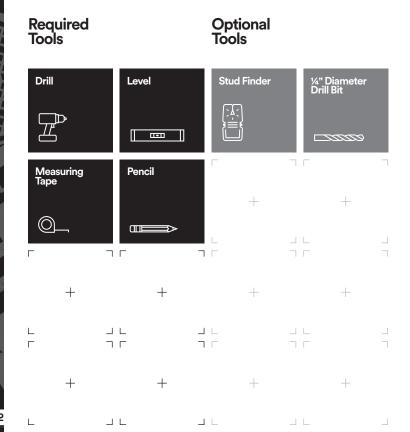

Tromso FM Install Guide Introduction

GET MORE RADNESS NOW AT SHELFOLOGY.COM Need A Hand? 949.244.1083 // Hello@Shelfology.com



DESIGNED & CRAFTED BY RADICALLY TALENTED Humans right here in the U.S. of Awesome

> .IGHTNING FAST .EAD TIMES_

P.003


ESS NOW AT SHEL 949.244.1083 //

GET MORE RADN NEED A HAND?

P.004

001


Installation Steps

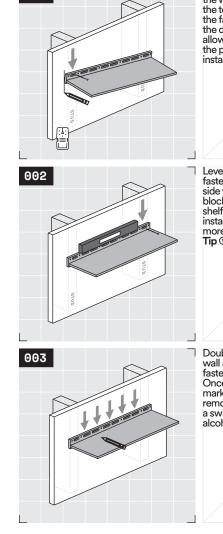

Yo! Here we go! Position your shelf on the wall with the pre-drilled holes along the top edge. Use a drill to fasten either the far left or right hole to the wall in the desired location. Using the slots will allow you to make minor adjustments to the position of your shelf. For masonry installs, see **Rad Tip** ③ on page 7.

Level your shelf, then set another fastener in the next stud or opposite side with your drill. If you have installed blocking behind the full length of your shelf, **skip to step 6**. If you have not installed blocking, proceed to step 3. For more information on blocking, see **Rad Tip** Θ on page 7.

Double check the shelf position on your wall and adjust if necessary. Mark all fastener holes and slots with a pencil. Once every fastener location has been marked, uninstall both fasteners and remove your shelf from the wall. Take a swig of your favorite soda or nonalcoholic brew.

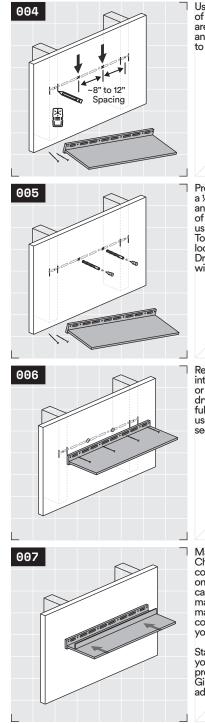

Use a stud finder to mark the location of every stud the shelf crosses. Then for areas between studs, mark a drywall anchor install location roughly every four to six inches along the length of the shelf.

Predrill each drywall anchor location with a ¼" drill bit to avoid breaking drywall anchors. Install a drywall anchor in each of these pre-drilled locations. If you are using your own anchors, we recommend Toggler brand for best results. Stud locations should not be pre-drilled. Drywall anchors should be installed flush with the drywall surface.

Replace the shelf and install a fastener into every location crossing a stud or blocking. For every location that a drywall anchor was installed, ensure a fully threaded #8 pan head fastener is used. For more information on fasteners, see **Rad Tip** ① on page 7.

Make a final inspection of your shelf. Check for shelf sag, confirm shelf is correctly secured to wall. See **Rad Tip** (2) on page 7. If you ordered a cover plate, carefully align to the back-bar and let the magnets snap onto the back-bar. You may need to then slide the cover into correct position. Take care not to pinch your fingers, those magnets are strong!

Stand back and relax, you did it! Give your cat a celebratory fist bump, if present. Gently place your Golden GirlsTM box collection on shelf and admire!

ပ္လ

LIGHTNING FA

romso FM Install Guide

Whoa, you made it! We are vicariously stoking for you right now. Post your sweet shelfie on Instagram now!

@shelfology #radshelfie

Need a hand? Speak with a Shelf Geek at 949.244.1083 or hello@shelfology.com today.

How did we do? You'll get an email soon asking for a product review, and we'd be stoked if you oblige. You rock in advance!

Warnings

① Correct Install Required For Safe Use ② Adhere To The Capacity Rating Of Your Specific Shelf ③ California Proposition 65 Warning ④ Not For Use In Wet Environments

1.1 Shelves must be correctly installed into studs or wall blocking. Failure to do so may result in sagging shelves, falling objects, or serious injury. 2.1 Every Shelfology shelf has been engineered for use with specific capacities. Failure to follow our specified capacity ratings may result in sagging shelves, falling objects, or serious injury. Please reference the Tromso FM Spec Sheet for more information.

3.1 This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. Don't eat this shelf. If you live outside of California, do whatever you want. For more boring information, visit www. p65warnings.ca.gov. 4.1 Powder coated carbon steel does not equal waterproof. If water has direct and constant contact with the shelf, like in a shower or outdoors, it will rust. Shelves installed in these conditions are not covered by our warranty.

P.006

-1

SHI 83

NOW AT 244.16

Rad Tips

① Fasten Into All Studs & Blocking The Shelf Crosses

② Using Shims With Your Shelf





1.1 Studs are the vertical 2x4 boards that make up the bones of your walls. They provide solid structure for your shelves to attach to.



2.1 If your wall is not straight, use shims to ensure your shelf is installed straight across the wall face and square to the wall.



3.1 Hold shelf in position and mark hole placements. Drill each marked location with a ¼" diameter masonry drill bit. Drill at least 2½" deep to allow for the 2½" wall fastener.



3.2 Using a hammer, tap masonry anchor into hole, flush with wall surface.



3.3 Hold shelf in position, and install masonry fasteners into anchors.

DES

IANS R

œ

CRAFTED

Bγ

π

ALENTED

ESOME

RIGHT HERE IN THE U.S. OF A

LIGHTNING F LEAD TIMES_







1.2 Blocking is typically added later between studs in the wall for additional support to mount shelves to, and is usually made from 2x4 or 2x6 lumber.



1.3 For a contractor grade install with best substrate strength, install blocking along the length of your shelf.



Need a hand? Speak with a Shelf Geek at 949.244.1083 or hello@shelfology.com today.

How did we do? You'll get an email soon asking for a product review, and we'd be stoked if you oblige. You rock in advance!

Call Email Shop Visit Social 949.244.1083 hello@shelfology.com www.shelfology.com 156 N 2nd E Rexburg, ID 83440 @shelfology

