

Shelfology  
Certified Rad™

Designed & Crafted  
By Radically Talented  
Humans Right Here In  
The U.S. Of Awesome\_

→ Patent  
Pending  
Design.

⚡ Lightning  
Fast Lead  
Times.

# Verne Shelf System

## Install Guide





Installation  
Difficulty  
Rating (1-10)

5

Table of Contents	Page
Installation Steps	004
Warnings	006
Rad Tips	007

Required  
Tools

Optional  
Tools

<p><b>Drill</b></p> 	<p><b>Level</b></p> 	<p><b>Stud Finder</b></p> 			
<p><b>Measuring Tape</b></p> 	<p><b>Low-tack Tape</b></p> 		+	+	
<p><b>Pencil</b></p> 	<p><b>Square</b></p> 		+	+	
<p><b>¼" Diameter Drill Bit</b></p> 	<p><b>Buddy/Pal</b></p> 		+	+	

GET MORE RADNESS NOW AT SHELFLOGY.COM  
NEED A HAND? 949.244.1083 // HELLO@SHELFLOGY.COM



START ↓ ↓

Featuring rich wood tones and cold-hard-steel framing, this diverse ladder-inspired shelving system is a perfect addition to any space. **Designed & Crafted By Radically Talented Humans Right Here In The U.S. Of Awesome.**

### What's In The Box

### What You'll Need

What's In The Box	What You'll Need	What You'll Need	What You'll Need
<b>Verne Bracket Set</b> 1x 	<b>Verne Shelf Slab Set</b> 1x 	<b>Innate Radness Done!</b> 	<b>Your Favorite Soda</b> 2x 
<b>Matching 2" Wall Fastener Set</b> 1x 	<b>Matching 1" Shelf Fastener Set</b> 1x 		
<b>Wall Anchor Set</b> 1x 			


DESIGNED & CRAFTED BY RADICALLY TALENTED HUMANS RIGHT HERE IN THE U.S. OF AWESOME.

LIGHTNING FAST LEAD TIMES.




# Installation Steps

001

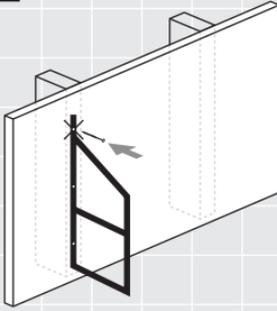


Yo, here we go! Position the first Verne bracket on your wall, ideally on a stud or blocking. See Rad Tip ① on page 7 if you don't know what blocking is. Mark the top-most fastener hole with the fastener tip. Remove bracket from wall, then grab a can of your favorite non-alcoholic brew and crack it open.

002

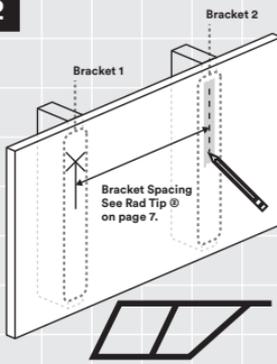

Measure the desired bracket spacing from fastener hole and righteously apply low-tack tape to general mounting area of second bracket. Measure again and draw a short vertical line on the tape. See Rad Tip ② on page 7.

003

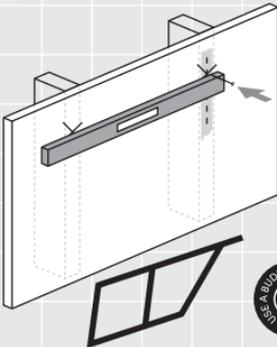


Place a level on first fastener hole. Find the intersection of the level and vertical line. If you do not have a long enough level, see Rad Tip ③ on page 7. Use a wall fastener to punch a hole into wall behind low-tack tape. Remove the tape.



GET MORE RADNESS NOW AT SHELFLOGY.COM  
NEED A HAND? 949.244.1083 // HELLO@SHELFLOGY.COM




004

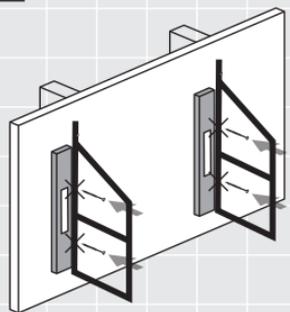


Install wall fasteners in the top fastener hole locations. Vertically level each bracket. Punch a hole in all remaining fastener locations with fastener tip. If your brackets are not on studs or blocking, skip to step 6. If your brackets are on studs or blocking, proceed to step 5.

005

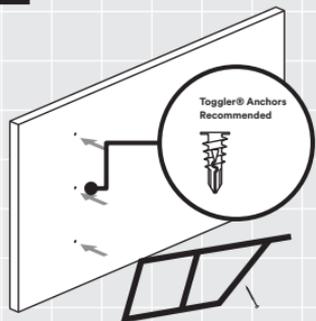


Remove the brackets from your wall. Predrill all marked fastener locations with a 1/8" drill bit, and install drywall anchors in each fastener hole location crossing drywall that isn't backed by studs or blocking. If you are installing on masonry, you must use a wall anchor rated for masonry use. If you are using your own anchors, we recommend Toggle brand. Take a swig of your brew.

006

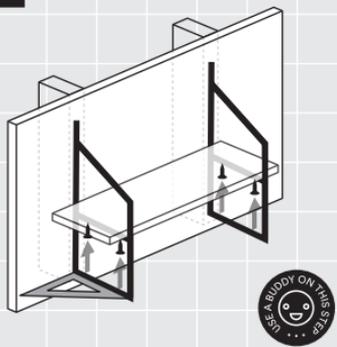

Position the brackets, install all 2" wall fasteners. Confirm the brackets are secure to wall. (Brackets may wiggle left to right at this point. Chillax, installing the shelves will resolve this!) Lay the top shelf on your bracket and position as desired. **See Rad Tip** © on page 7. Position the brackets perpendicular to your wall by using a square. Hold the shelf in place and install all 1" shelf set screws, then repeat for remaining shelves. Take another swig of that sweet, sweet nectar.

007

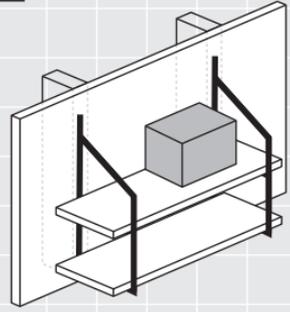

Stand back and relax. You did it! Fist-bump your buddy, if present. Gently place your Ninja Turtles™ box collection on shelf and admire! Finish off your soda, it's time to celebrate your innate awesomeness! You finished the shelf install and deserve heaps of adulation. If you need more help, please reach out to a shelf geek today.

hello@shelfology.com  
949.244.1083





Whoa, you made it! We are vicariously stoking for you right now. Post your sweet shelfie on Instagram now!



@shelfology  
#radshelfie

Need a hand? Speak with a Shelf Geek at 949.244.1083 or hello@shelfology.com today.

How did we do? You'll get an email soon asking for a product review, and we'd be stoked if you oblige. You rock in advance!

## Warnings



**1** Correct Install Required For Safe Use

1.1 Shelf brackets must be correctly installed into studs, blocking, or the appropriate wall anchors. Failure to do so may result in sagging shelves, falling objects, or serious injury.

**2** Adhere To The Capacity Rating Of Your Specific Bracket

2.1 Every Shelfology bracket weight class and length has been engineered for use with specific shelf capacities/dimensions. Failure to follow our specified capacity ratings and correct shelf dimensions may result in sagging shelves, falling objects, or serious injury. For more information, reference the Verne Specification Sheet.

**3** California Proposition 65 Warning


3.1 This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. Don't eat these brackets or shelves. If you live outside of California, do whatever you want. For more boring information, visit [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).

**4** This Product May Make Others Incredibly Jealous

4.1 Any Shelfology Certified Rad™ product should be flaunted with caution around friends, loved ones, and even complete strangers, as minimal or extreme jealousy may occur. Shelf responsibly.




## ① Fasten Into All Studs & Blocking The Bracket Crosses



**1.1** Studs are the vertical 2x4 boards that make up the bones of your walls. They provide solid structure for your shelves to attach to.

When you install Verne correctly, each shelf will handily hold up to 100 lbs.

## ② Bracket Spacing




**2.1** Bracket spacing is up to you. It's part of Verne's insanely cool aesthetic. With that said, these brackets should never be more than 48" apart. Saggy shelves suck!

## ③ Using a Longer Level




**3.1** You can turn a short level into a long one by laying it on a straight object like a yard stick. Just hold it on the wall with your bubble level on top and measure!

## ④ Bracket Position



**4.1** If you want our opinion, brackets should be set 2" OC (on center) from each end of the shelf, with an additional centered bracket for shelves over 48".



**1.2** Blocking is typically added later between studs in the wall for additional support to mount shelves to, and is usually made from 2x4 or 2x6 lumber.

DESIGNED & CRAFTED BY RADICALLY TALENTED  
HUMAN'S RIGHT HERE IN THE U.S. OF AWESOME.

LIGHTNING FAST  
LEAD TIMES.

---

Need a hand? Speak with a Shelf Geek at 949.244.1083 or hello@shelfology.com today.

How did we do? You'll get an email soon asking for a product review, and we'd be stoked if you oblige. You rock in advance!

---

Call 949.244.1083  
Email hello@shelfology.com  
Shop www.shelfology.com  
Visit 156 N 2nd E Rexburg, ID 83440  
Social @shelfology

