

Shelfology
Certified Rad_™

Designed &
Engineered In The
U.S. Of Awesome_

→ Patent
Pending
Design.

⚡ Lightning
Fast Lead
Times.

Yuri FM Bracket Install Guide











Installation Difficulty Rating (1-10)

7

Table of Contents	Page
Installation Steps	004
Warnings	006
Rad Tips	007

Required Tools

Optional Tools


Drill 	Level 	Pencil 	¼" Diameter Drill Bit 
Measuring Tape 	+	Stud Finder 	+
+	+	+	+
+	+	+	+



START ↓↓

Crazy strong rods means Yuri FM delivers superior floating desk results, every time. This bracket hangs above the rest! **Designed & Engineered In The U.S. Of Awesome. Rad!**

What's In The Box

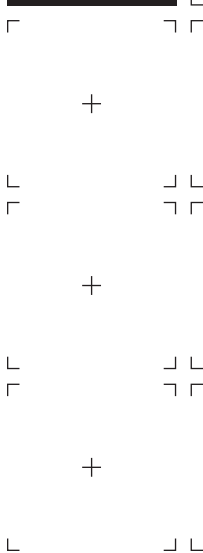

What You'll Need



DESIGNED & ENGINEERED IN THE U.S. OF AWESOME.

LIGHTNING FAST LEAD TIMES.




Installation Steps

Yuri FM Install Guide
Installation Steps


GET MORE RADNESS NOW AT SHELFLOGY.COM
NEED A HAND? 949.244.1083 // HELLO@SHELFLOGY.COM

001

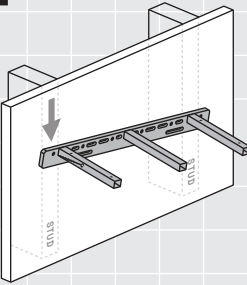


Let's dive in, homies! Orient your bracket on the wall so the channels across the top of your bracket face up. Use a drill to install a fastener in either far left or right hole.

002

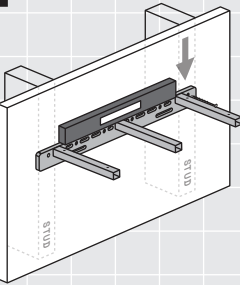

Level your bracket, set another fastener in the opposite end hole with your drill. If you have installed blocking behind the full length of your bracket, skip to **Step 6**. If you have not installed blocking, proceed to step 3. For more information on blocking, see **Rad Tip** ① on page 7.


003

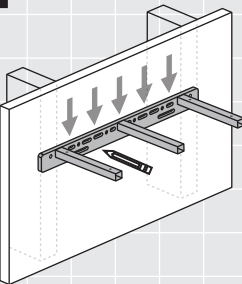

Mark all fastener holes and channels with a pencil. Once every fastener location has been marked, uninstall both fasteners and remove your bracket from the wall.




004

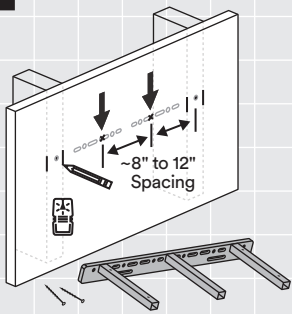


Use a stud finder to mark the location of every stud the bracket crosses. Then for areas between studs, mark one or two drywall anchor install locations roughly every eight to twelve inches or less along the length of the bracket depending on the stud spacing in your wall.

005

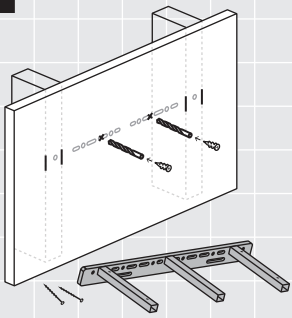


Predrill each drywall anchor location with a 1/4" drill bit to avoid breaking drywall anchors. Install a drywall anchor in each of these pre-drilled locations. If you are using your own anchors, we recommend Toggler brand for best results. Stud locations should not be pre-drilled. Drywall anchors should be installed flush with the drywall surface.

006

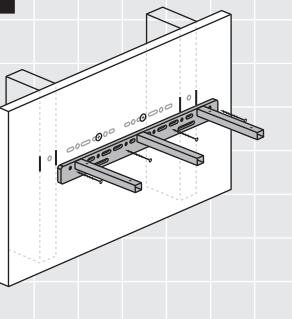


Confirm the position of the bracket and install a fastener into every location crossing a stud or blocking. For every location that a drywall anchor was installed, ensure a fully threaded #8 fastener is used.

007

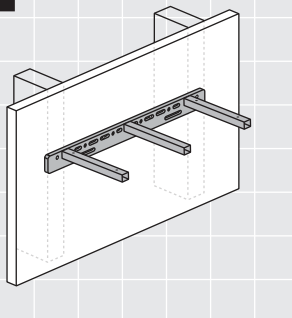

That's it! Make a final inspection of your bracket. Check for bracket sag, confirm bracket is correctly secured to wall. To correct sag, see **Rad Tip** ® on page 7. Your bracket is now prepared for a prime desk slab to be installed. If you need more help, please reach out to a shelf geek today.

hello@shelfology.com
949.244.1083





Whoa, you made it! We are vicariously stoking for you right now. Post your sweet shelfie on Instagram now!



@shelfology
#radshelfie

Need a hand? Speak with a Shelf Geek at 949.244.1083 or hello@shelfology.com today.

How did we do? You'll get an email soon asking for a product review, and we'd be stoked if you oblige. You rock in advance!

Yuri FM Install Guide
Warnings

GET MORE RADNESS NOW AT SHEFFOLOGY.COM
NEED A HAND? 949.244.1083 // HELLO@SHEFFOLOGY.COM

Warnings



① **Correct Install Required For Safe Use**

1.1 Brackets must be correctly installed into studs or wall blocking. Failure to do so may result in sagging desks, falling objects, or serious injury.

② **Adhere To The Capacity Rating Of Your Specific Bracket**

2.1 Every Shelfology bracket has been engineered for use with specific desk capacities. Failure to follow our specified capacity ratings may result in sagging desks, falling objects, or serious injury. For more information, reference the Yuri FM Specifications Sheet.

③ **California Proposition 65 Warning**


3.1 This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. Don't eat this bracket. If you live outside of California, do whatever you want. For more boring information, visit www.p65warnings.ca.gov.

④ **This Product May Make Others Incredibly Jealous**


4.1 Any Shelfology Certified Rad™ product should be flaunted with caution around friends, loved ones, and even complete strangers, as minimal or extreme jealousy may occur. Shelf responsibly.



① Fasten Into All Studs & Blocking The Bracket Crosses



1.1 Studs are the vertical 2x4 boards that make up the bones of your walls. They provide solid structure for your brackets to attach to.




1.2 Blocking is typically added later between studs in the wall for additional support to mount brackets to, and is usually made from 2x4 or 2x6 lumber.




1.3 For a contractor grade install with best substrate strength, install blocking along the length of your bracket.

② Using Shims With Your Bracket



2.1 If your wall is not straight, use shims to ensure your bracket is installed straight across the wall face and square to the wall. The desk slab and bracket will properly mate only if the bracket is straight and plum.



2.2 If your bracket continues to sag after correct install, use wood shims underneath the backbar to adjust front to back level.

Need a hand? Speak with a Shelf Geek at 949.244.1083 or hello@shelfology.com today.

How did we do? You'll get an email soon asking for a product review, and we'd be stoked if you oblige. You rock in advance!

Call 949.244.1083
Email hello@shelfology.com
Shop www.shelfology.com
Visit 156 N 2nd E Rexburg, ID 83440
Social @shelfology

