

Shelfology
Certified Rad_™

Made In The U.S.A.
By Woodworkers, For
Woodworkers_

→ Patent
Pending
Design.

⚡ Lightning
Fast Lead
Times.

★ Made
In The
USA.

Floaty Mini Floating Shelf

Install Guide












Installation
Difficulty
Rating (1-10)

4

Table of Contents	Page
Installation Steps	004
Warnings	006
Rad Tips	007

**Required
Tools**

**Optional
Tools**

Drill 	Level 	Pencil 	¼" Diameter Drill Bit 
Measuring Tape 	Phillips-head Screwdriver 	Stud Finder 	+
Low-tack Tape 	+	+	+
+	+	+	+






GET MORE RADNESS NOW AT SHELFLOGY.COM
NEED A HAND? 949.244.1083 // HELLO@SHELFLOGY.COM

START ↓ ↓

The Floaty Mini Shelf has super-floating powers. It can hold up to 20 pounds, and comes in 15 solid hardwood finishes and colors. Made in-house by us in the United States of Awesome. Rad!

What's In The Box

What You'll Need

<p>Floaty Shelf 1x</p> 	<p>Floaty Mounting Template 1x</p> 	<p>Innate Radness Done!</p> 	<p>+</p>
<p>Double-headed Fastener 1x</p> 	<p>Wall Anchor Set 1x</p> 	<p>+</p>	<p>+</p>

CERTIFIED
RAD™


MADE IN THE
U.S. OF A.

LIGHTNING FAST
LEAD TIMES




Installation Steps

001

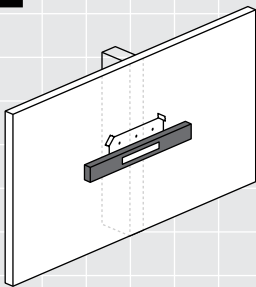


Yo! The following steps apply to all product variations of the Floaty Mini Shelf. Place the paper template on your wall in the desired location for your shelf. Use a level to refine the template position. Use low-tack tape to secure it in place. Whenever possible, align your shelf fastener holes with a stud or blocking for optimum weight capacity. See **Rad Tip** Ⓞ on page 7.

002

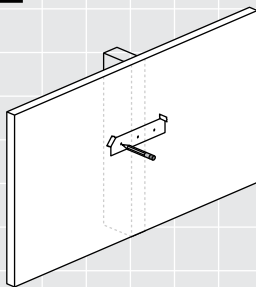

Ensure the template is level, then use a pencil to mark each fastener hole location through the template. Afterwards, remove your template from the wall and set aside.


003

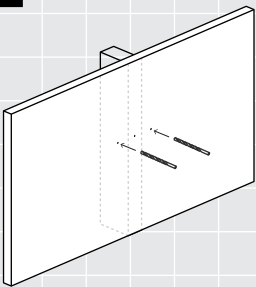

Drill a pilot hole in the center of each marked location that does not cross a stud or blocking using a 1/8" drill bit. If marked location is backed by a stud or blocking, there is no need to pre-drill in this location.




004

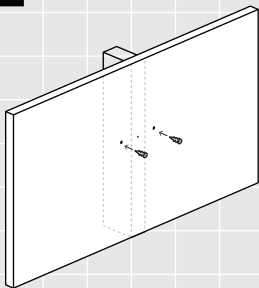


Install a drywall anchor into each pilot hole using a drill with a phillips drill bit. Be sure the anchor sits flush with the surface of the wall.

005

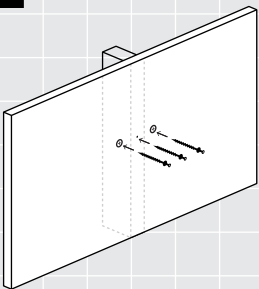


Using a phillips drill bit, install a double headed wall fastener into each marked location. When installing the fasteners into drywall anchors, it is recommended that the final turns be done by hand with a screw driver, so as to not overtighten. Your shelf will mount best when all fastener heads are aligned at an equally proud distance from the wall.

006

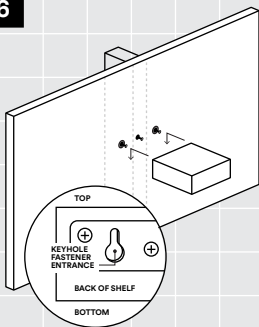

Hold your shelf with the large opening of the keyhole positioned at the bottom. Place the heads of the double headed fasteners into the widest part of these holes. Push forward until the shelf touches the wall, then press downward gently and evenly from the top of the shelf nearest the wall edge. Make final adjustments with a level if needed. If the fasteners do not lock in place with their corresponding keyholes, see Rad Tip ® on page 7.

007

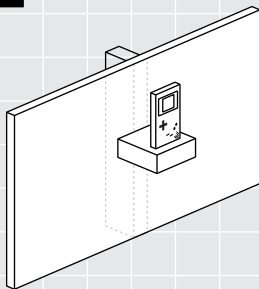

Hooray! You did it. Give your cat a celebratory fist bump if present. Gently place your vintage 1980s Nintendo Gameboy™ on the shelf and admire!





Whoa, you made it! We are vicariously stoking for you right now. Post your sweet shelfie on Instagram now!



@shelfology
#radshelfie

Need a hand? Speak with a Shelf Geek at 949.244.1083 or hello@shelfology.com today.

How did we do? You'll get an email soon asking for a product review, and we'd be stoked if you oblige. You rock in advance!

Warnings



1 Correct Install Required For Safe Use

1.1 Shelves must be correctly installed into studs, wall blocking, or appropriate wall fasteners. Failure to do so may result in sagging shelves, falling objects, or serious injury.

2 Adhere To The Capacity Rating Of Your Specific Bracket

2.1 Every Shelfology shelf has been engineered for use with specific shelf capacities. Failure to follow our specified capacity ratings may result in sagging shelves, falling objects, or serious injury. For more information, reference the Floaty Specifications Sheet.

3 California Proposition 65 Warning


3.1 This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. Don't eat this bracket. If you live outside of California, do whatever you want. For more boring information, visit www.p65warnings.ca.gov.

4 This Product May Make Others Incredibly Jealous

4.1 Any Shelfology Certified Rad™ product should be flaunted with caution around friends, loved ones, and even complete strangers, as minimal or extreme jealousy may occur. Shelf responsibly.



① Fasten Into All Studs & Blocking The Shelf Crosses




1.1 Studs are the vertical 2x4 boards that make up the bones of your walls. They provide solid structure for your shelves to attach to.


② Adjusting Your Double-Headed Fastener



2.1 If the top of a double-headed fastener does not engage with its keyhole in the rear backplate, it can be adjusted. A slight counterclock-wise turn will bring the head outwards to the appropriate depth, and vice versa. A hand-held phillips screwdriver is recommended for this adjustment.



1.2 Blocking is typically added later between studs in the wall for additional support to mount shelves to, and is usually made from 2x4 or 2x6 lumber.




1.3 For a contractor grade install with best substrate strength, install blocking along the length of your shelf.

CERTIFIED
RAD™

MADE IN THE
U.S. OF A.

LIGHTNING FAST
LEAD TIMES.

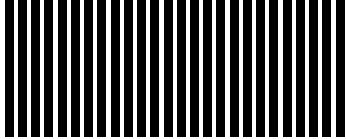

Need a hand? Speak with a Shelf Geek at 949.244.1083 or hello@shelfology.com today.

How did we do? You'll get an email soon asking for a product review, and we'd be stoked if you oblige. You rock in advance!

Call 949.244.1083
Email hello@shelfology.com
Shop www.shelfology.com
Visit 156 N 2nd E Rexburg, ID 83440
Social @shelfology



ON THE WALL
DESIGNS
BY OFF THE WALL
DESIGNERS™