

Shelfology
Certified Rad™

Designed & Crafted
By Radically Talented
Humans Right Here In
The U.S. Of Awesome_

→ Patent
Pending
Design.

⚡ Lightning
Fast Lead
Times.

Lippie Stainless Steel Shower Ledge

Install Guide






5

Table of Contents	Page
Installation Steps	004
Warnings	006
Rad Tips	007

Required Tools

Optional Tools

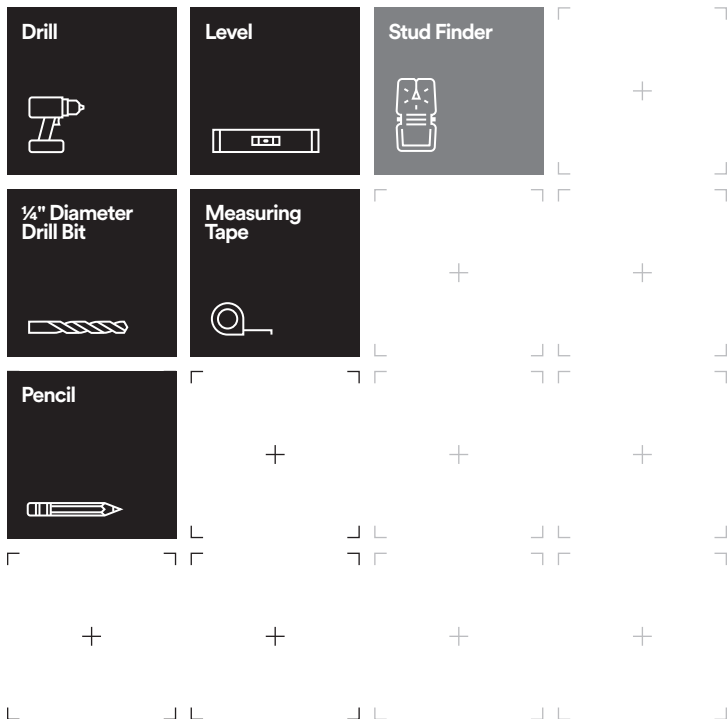




START ↓↓

Hang all your shower doodads in style. Lippie Stainless Steel Shower Ledge is rust resistant and ready to wow. **Designed & Crafted By Radically Talented Humans Right Here In The U.S. Of Awesome.**

What's In The Box



What You'll Need




DESIGNED & CRAFTED BY RADICALLY TALENTED HUMANS RIGHT HERE IN THE U.S. OF AWESOME.

LIGHTNING FAST LEAD TIMES.




Installation Steps

001

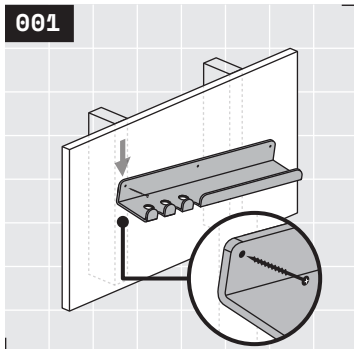


Woah! That's a wicked Lippie Stainless Steel Shower Ledge you have there! Position the ledge on the wall with the pre-drilled holes along the top edge. Using a stud finder, align fastener holes with as many studs as possible. Use drill to fasten matching 1½" fastener in either

002

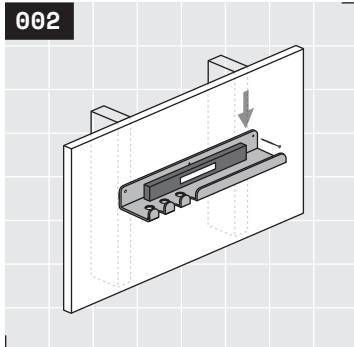

Level the ledge and set second matching 1½" fastener in opposite end fastener hole with your drill. If the fastener holes miss an available stud, see **Rad Tip ①** on page 7. If you've already installed blocking behind the length of the backbar, skip to Step 5.


003

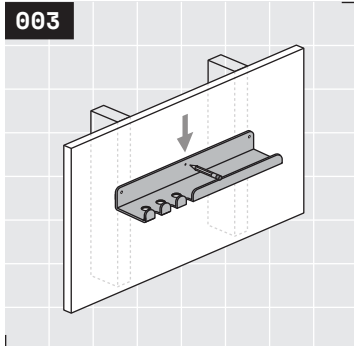

While the ledge is mounted to the wall, mark every remaining empty fastener hole with a pencil.




004

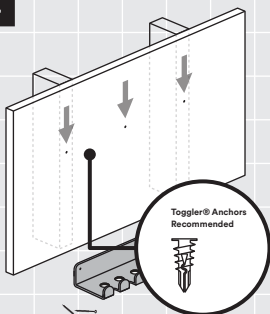


Remove the ledge from the wall to install wall anchors in each marked location that is not on a wall stud. Predrill each wall anchor location with $\frac{1}{4}$ " drill bit to avoid breaking wall anchors.

005

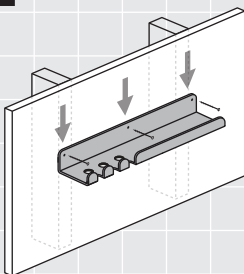


Replace the ledge. Drill matching $1\frac{1}{2}$ " fastener into each fastener hole.

006

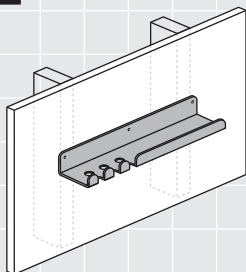

Make final inspection of the ledge. Check for ledge sag, confirm the ledge is correctly secured to wall. If your ledge is sagging, refer to **Rad Tip** ① and ②.

007

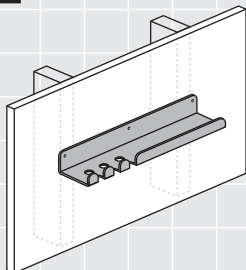

Stand back and relax, you did it! Give your cat a celebratory fist bump, if present. If you need more help, please reach out to a ledge geek today.

hello@shelfology.com
949.244.1083



Whoa, you made it! We are vicariously stoking for you right now. Post your sweet shelfie on Instagram now!



@shelfology
#radshelfie

Need a hand? Speak with a Shelf Geek at 949.244.1083 or hello@shelfology.com today.

How did we do? You'll get an email soon asking for a product review, and we'd be stoked if you oblige. You rock in advance!

Warnings



① Correct Install Required For Safe Use

1.1 Ledges must be correctly installed into studs or wall blocking. Failure to do so may result in sagging ledges, falling objects, or serious injury.

② Adhere To The Capacity Rating Of Your Specific Ledge

2.1 Every Shelfology ledge length has been engineered for use with specific ledge capacities/dimensions. Failure to follow our specified capacity ratings and correct ledge dimensions may result in sagging ledges, falling objects, or serious injury. Please reference the Lippie Stainless Steel Shower Ledge Spec Sheet for more information.


③ California Proposition 65 Warning

3.1 This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. Don't eat this ledge. If you live outside of California, do whatever you want. For more boring information, visit www.p65warnings.ca.gov.

④ This Product May Make Others Incredibly Jealous


4.1 Any Shelfology Certified Rad™ product should be flaunted with caution around friends, loved ones, and even complete strangers, as minimal or extreme jealousy may occur. Shelf responsibly.

① Fasten Into All Studs & Blocking The Ledge Crosses

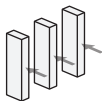


1.1 Studs are the vertical 2x4 boards that make up the bones of your walls. They provide solid structure for your ledge to attach to.

② Using Shims to Straighten Ledge

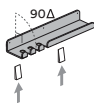

2.1 If your wall is not straight, use shims to ensure your ledge is installed straight across the wall face and square to the wall.

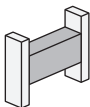

1.2 Blocking is typically added later between studs in the wall for additional support to mount ledges to, and is usually made from 2x4 or 2x6 lumber.

DESIGNED & CRAFTED BY RADICALLY TALENTED
HUMANS RIGHT HERE IN THE U.S. OF AWESOME.

LIGHTNING FAST
LEAD TIMES.

Need a hand? Speak with a Shelf Geek at 949.244.1083 or hello@shelfology.com today.

How did we do? You'll get an email soon asking for a product review, and we'd be stoked if you oblige. You rock in advance!

Call	949.244.1083
Email	hello@shelfology.com
Shop	www.shelfology.com
Visit	156 N 2nd E Rexburg, ID 83440
Social	@shelfology

