

Shelfology
Certified Rad™

Made In The U.S.A.
By Woodworkers, For
Woodworkers_

→ Patent
Pending
Design.


⚡ Lightning
Fast Lead
Times.

★ Made
In The
USA.

Mosey Magnet Board

Install Guide











Installation
Difficulty
Rating (1-10)

3

Table of Contents	Page
Installation Steps	004
Warnings	006
Rad Tips	007

Required
Tools

Optional
Tools

Drill 	Level 	Stud Finder 					
Measuring Tape 	Pencil 						
1/4" Diameter Drill Bit 							

GET MORE RADNESS NOW AT SHELFLOGY.COM
NEED A HAND? 949.244.1083 // HELLO@SHELFLOGY.COM










START ↓ ↓

With a vast variety of colors and sizes, Mosey will help you post everything from fond memories to urgent memos. Made in-house by us in the United States of Awesome. Rad!

What's In The Box

What You'll Need

Mosey Magnet Board 1x 	Matching 2" Wall Fastener Set 1x 	Expo Dry-Erase Marker Kit 1x 	Innate Radness Done! 
½" Nylon Standoff Set 1x 	Wall Anchor Set 1x 		
Magnet Set 1x 			

CERTIFIED
RAD™


MADE IN THE
U.S. OF A.

LIGHTNING FAST
LEAD TIMES




Installation Steps

001

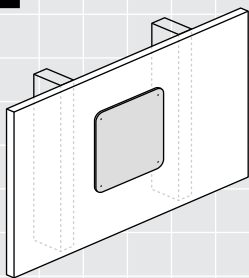


Yo, let's go! Position your Mosey magnet board on your wall, ideally with fastener holes aligned on a stud or blocking. **See Rad Tip** ① on page 7 for more on blocking.

002

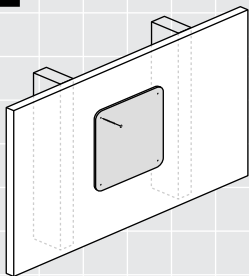

Partially install a fastener into an upper fastener hole location. Mark the location first with a pencil or fastener tip if needed. Do not fasten to full tightness.


003

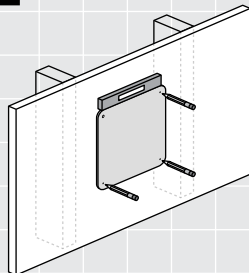

Level the board. Mark all remaining fastener hole locations. Uninstall the first fastener, and set the board aside.




004

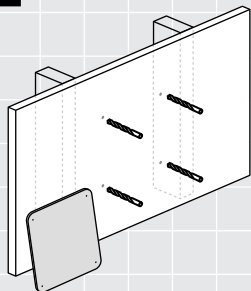


Drill a pilot hole for each fastener location using a 1/4" drill bit. Pilot holes and wall anchors are not needed for locations backed by studs or blocking.

005

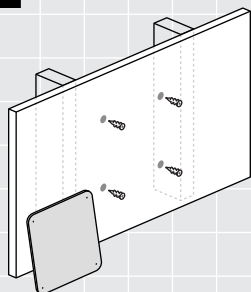


Install drywall anchors in each fastener hole location crossing drywall that isn't backed by studs or blocking. If you are installing on masonry, you must use a wall anchor rated for masonry use. If you are using your own anchors, we recommend Toggler brand.

006

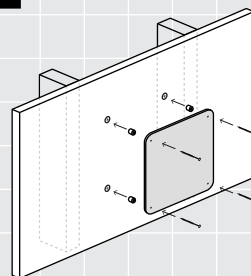

Position the board. Beginning at the top of the board, install all wall fasteners through board and nylon standoffs.


007

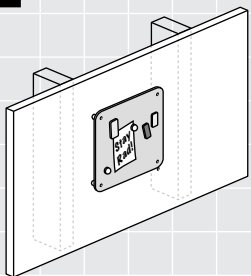

Stand back and relax, you did it! Give your cat a celebratory fist bump, if present. Before using any dry erase markers, see **Rad Tip** ® on page 7.

If you need more help, please reach out to a shelf geek today.

hello@shelfology.com
949.244.1083





Whoa, you made it! We are vicariously stoking for you right now. Post your sweet shelfie on Instagram now!



@shelfology
#radshelfie

Need a hand? Speak with a Shelf Geek at 949.244.1083 or hello@shelfology.com today.

How did we do? You'll get an email soon asking for a product review, and we'd be stoked if you oblige. You rock in advance!

Warnings



① **Correct Install Required For Safe Use**

1.1 Magnet boards must be correctly installed into studs, blocking, or the appropriate wall anchors. Failure to do so may result in sagging boards, falling objects, or serious injury.

② **California Proposition 65 Warning**

2.1 This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. Don't eat these magnet boards. If you live outside of California, do whatever you want. For more boring information, visit www.p65warnings.ca.gov.

③ **This Product May Make Others Incredibly Jealous**


3.1 Any Shelfology Certified Rad™ product should be flaunted with caution around friends, loved ones, and even complete strangers, as minimal or extreme jealousy may occur. Shelf responsibly.

GET MORE RADNESS NOW AT SHEFFOLOGY.COM
NEED A HAND? 949.244.1083 // HELLO@SHEFFOLOGY.COM

Rad Tips



① Fasten Into All Studs & Blocking The Magnet Board Crosses




1.1 Studs are the vertical 2x4 boards that make up the bones of your walls. They provide solid structure for your magnet boards to attach to.

② Use Expo Brand Dry Erase Markers To Save Your Mosey



2.1 To avoid staining your Mosey Magnetic board, use only Expo brand dry erase markers and common dry erase solutions to clean.




1.2 Blocking is typically added later between studs in the wall for additional support to mount products to, and is usually made from 2x4 or 2x6 lumber.

CERTIFIED
RAD™

MADE IN THE
U.S. OF A.

LIGHTNING FAST
LEAD TIMES

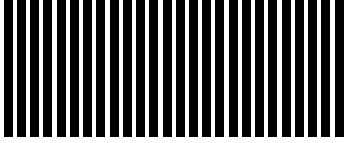

Need a hand? Speak with a Shelf Geek at 949.244.1083 or hello@shelfology.com today.

How did we do? You'll get an email soon asking for a product review, and we'd be stoked if you oblige. You rock in advance!

Call 949.244.1083
Email hello@shelfology.com
Shop www.shelfology.com
Visit 156 N 2nd E Rexburg, ID 83440
Social @shelfology



ON THE WALL
DESIGNS
BY OFF THE WALL
DESIGNERS

