

Shelfology  
Certified Rad™ \_  
Designed & Crafted  
By Radically Talented  
Humans Right Here In  
The U.S. Of Awesome\_

|  
→ Patent  
✓ Pending  
Design.

|  
⚡ Lightning  
→ Fast Lead  
Times.

# Peek Cabinet Pull

## Install Guide







Installation  
Difficulty  
Rating (1-10)

5

| Table of Contents  | Page |
|--------------------|------|
| Installation Steps | 004  |
| Warnings           | 006  |
| Rad Tips           | 007  |

Required  
Tools

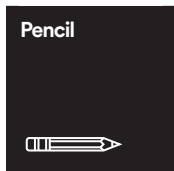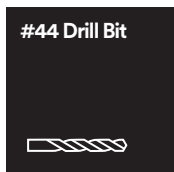

Optional  
Tools



+

+

+

+







START ↓↓

Crafted from heavy-duty steel and available in 30+ colors, Peek Cabinet Pulls are built tough and designed to turn heads. **Designed & Crafted By Radically Talented Humans Right Here In The U.S. Of Awesome.**

## What's In The Box

## What You'll Need

|  |  |   |   |  |
|--|--|---|---|--|
| <b>Peek Cabinet Pull</b><br>1x<br> | <b>Cabinet Fastener Set</b><br>1x<br> | <b>Innate Radness Done!</b><br> | + |  |
| <b>Wall Anchor Set</b><br>1x<br>   | +  | +   | + |  |
| +  | +  | +   | + |  |
|  |  |   |   |  |
|  |  |   |   |  |
|  |  |   |   |  |


DESIGNED & CRAFTED BY RADICALLY TALENTED HUMANS RIGHT HERE IN THE U.S. OF AWESOME.

LIGHTNING FAST LEAD TIMES.




# Installation Steps

001

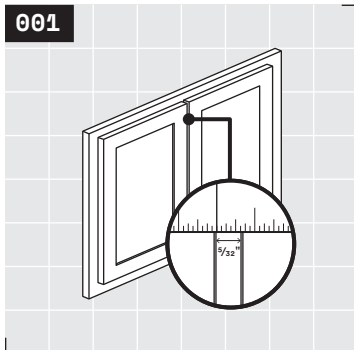


Let's go! First things first, make sure you have sufficient space for your Peek Cabinet Pulls. Ensure that there is at least  $\frac{5}{32}$ " gap between cabinet doors where any adjacent pulls will be located.

002

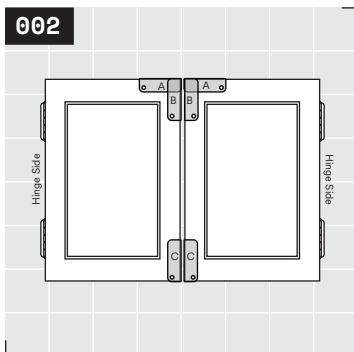

Use your totally rad sense of design to find the best location for your Peek Cabinet Pulls. If you are not sure, the illustration here shows suggested configurations. See **Rad Tip ①** on page 7 for additional help.


003

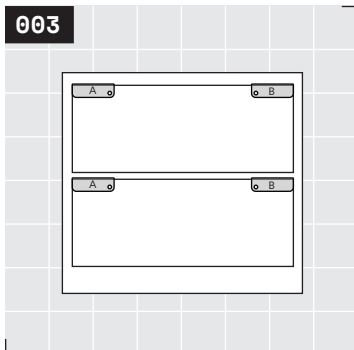

If you are using Peek Cabinet Pulls as drawer pulls, here are some suggested configurations. Otherwise, **skip to Step 4.**




004

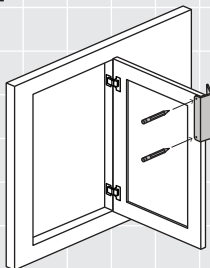


Position cabinet pull in desired location, hold in place and mark fastener holes with a pencil or fastener tip.

005

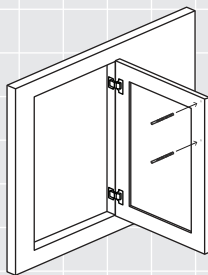


Drill a small pilot hole in the center of your mark with a #44 (.086") or smaller drill. To avoid accidental drill through, keep the pilot hole shallow. See **Rad Tip** ② on page 7.

006

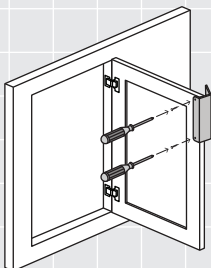

Reposition your cabinet pull, and install cabinet fasteners with a phillips head screw driver.

007

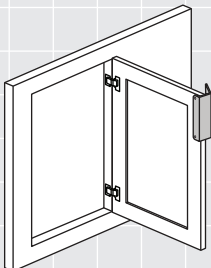

Stand back and relax, you did it! Give your cat a celebratory fist bump, if present.

If you need more help, please reach out to a shelf geek today.

hello@shelfology.com  
949.244.1083



Whoa, you made it! We are vicariously stoking for you right now. Post your sweet shelfie on Instagram now!



@shelfology  
#radshelfie

Need a hand? Speak with a Shelf Geek at 949.244.1083 or hello@shelfology.com today.

How did we do? You'll get an email soon asking for a product review, and we'd be stoked if you oblige. You rock in advance!

## Warnings



### ① Correct Install Required For Safe Use

1.1 Cabinet Pulls must be correctly installed. Failure to do so may result in sagging cabinet pulls, falling objects, or serious injury. Please reference the Peek Cabinet Pull Spec Sheet for more information.


### ② California Proposition 65 Warning

2.1 This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. Don't eat this cabinet pull. If you live outside of California, do whatever you want. For more boring information, visit [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).

### ③ This Product May Make Others Incredibly Jealous


3.1 Any Shelfology Certified Rad™ product should be flaunted with caution around friends, loved ones, and even complete strangers, as minimal or extreme jealousy may occur. Shelf responsibly.

## ① Flush Mount Your Cabinet Pull

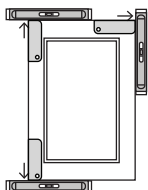

**1.1** To flush-mount your cabinet pull, place a level or a straight edge along the side of the door. Slide the cabinet pull into place until it touches the level. Hold in place and mark the screw hole locations.

## ② Avoid Drilling Too Deeply



**2.1** To avoid drilling too deeply, measure the thickness of your cabinet door. Wrap a piece of tape around your drill bit to mark a drilling depth at least  $\frac{1}{4}$ " less than the door thickness. Drill just until the tape reaches the surface. It may be helpful to remove the cabinet door to obtain accurate drilling.

DESIGNED & CRAFTED BY RADICALLY TALENTED  
HUMANS RIGHT HERE IN THE U.S. OF AWESOME.

LIGHTNING FAST  
LEAD TIMES.

---

**Need a hand? Speak with a Shelf Geek at 949.244.1083 or [hello@shelfology.com](mailto:hello@shelfology.com) today.**

**How did we do? You'll get an email soon asking for a product review, and we'd be stoked if you oblige. You rock in advance!**

---

|        |  |
|--------|--|
| Call   | 949.244.1083   |
| Email  | <a href="mailto:hello@shelfology.com">hello@shelfology.com</a> |
| Shop   | <a href="http://www.shelfology.com">www.shelfology.com</a>     |
| Visit  | 156 N 2nd E Rexburg, ID 83440                                  |
| Social | @shelfology  |

