

Shelfology
Certified Rad_™

Designed &
Engineered In The
U.S. Of Awesome_

→ Patent
✓ Pending
Design.

⚡ Lightning
→ Fast Lead
Times.

Steddy Floating Bench Bracket

Install Guide







Installation Difficulty Rating (1-10)

Table of Contents	Page
Installation Steps	004
Warnings	006
Rad Tips	007

Required Tools

Optional Tools




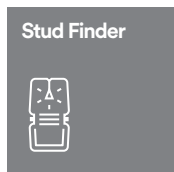
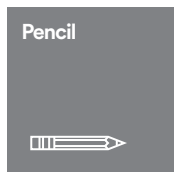




START ↓↓

Crazy strong rods means Steddy delivers superior floating bench results, every time. This bracket hangs above the rest! **Designed & Engineered In The U.S. Of Awesome. Rad!**

What's In The Box

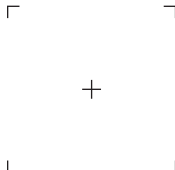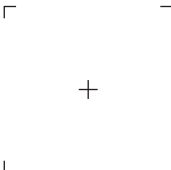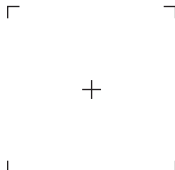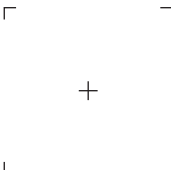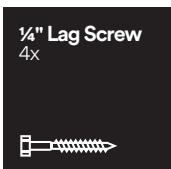


DESIGNED & ENGINEERED IN
THE U.S. OF AWESOME.

LIGHTNING FAST
LEAD TIMES.



Installation Steps


001

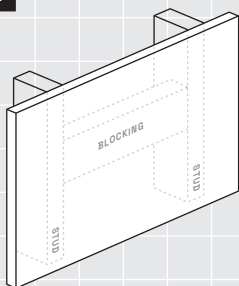

Let's dive in, homies!

The use of an electronic stud finder is recommended to find blocking that aligns with the mounting holes of the handle. Install additional blocking as needed to ensure each mounting hole is completely backed by blocking.


002

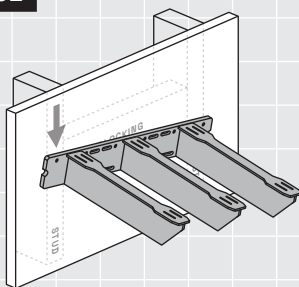

Orient your bracket on the wall so the channels across the top of your bracket face up. Use a drill to install a fastener in either far left or right hole.

Level your bracket, set another fastener in the opposite end hole with your drill.


003

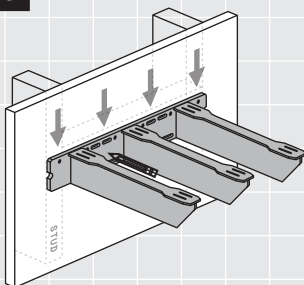

Mark all fastener holes and channels with a pencil. Once every fastener location has been marked, uninstall both fasteners and remove your bracket from the wall.




004

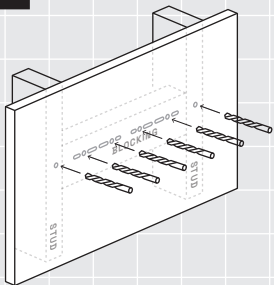

Use a $\frac{3}{16}$ " drill bit to create a pilot hole at least $1\frac{1}{2}$ " deep in the center of the mounting location before installing lag screws.


Failure to properly drill pilot holes may split the stud or blocking, resulting in major structural rework to your wall and bench project.

005

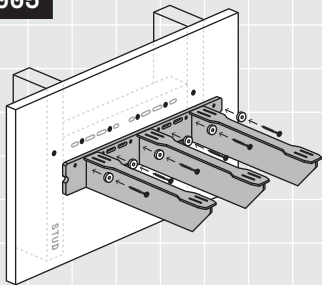

Confirm the position of the bracket. Using a socket wrench with a $\frac{1}{2}$ " socket, install a washer and lag screw through each mounting hole. Do not fully tighten until each lag screw is in place. Once lag screws are installed, fully tighten each, checking for solid engagement between the lag screw and the blocking or stud.

006

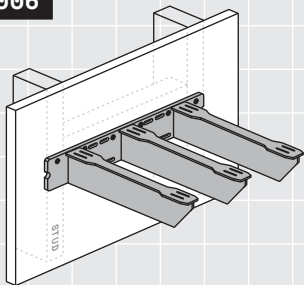

That's it! Make a final inspection of your bracket. Check for bracket sag, confirm bracket is correctly secured to wall. To correct sag, see **Rad Tip** @ on page 7. Your bracket is now prepared for a prime bench slab to be installed. If you need more help, please reach out to a shelf geek today.

hello@shelfology.com
949.244.1083



Whoa, you made it! We are vicariously stoking for you right now. Post your sweet shelfie on Instagram now!



@shelfology
#radshelfie

Need a hand? Speak with a Shelf Geek at 949.244.1083 or hello@shelfology.com today.

How did we do? You'll get an email soon asking for a product review, and we'd be stoked if you oblige. You rock in advance!

Warnings



① Correct Install Required For Safe Use

1.1 Brackets must be correctly installed into studs or wall blocking. Failure to do so may result in sagging benches, falling objects, or serious injury.

② Adhere To The Capacity Rating Of Your Specific Bracket

2.1 Every Shelfology bracket has been engineered for use with specific bench capacities. Failure to follow our specified capacity ratings may result in sagging benches, falling objects, or serious injury. For more information, reference the Steady Bench Bracket Specifications Sheet.

③ California Proposition 65 Warning


3.1 This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. Don't eat this bracket. If you live outside of California, do whatever you want. For more boring information, visit www.p65warnings.ca.gov.

④ This Product May Make Others Incredibly Jealous

4.1 Any Shelfology Certified Rad™ product should be flaunted with caution around friends, loved ones, and even complete strangers, as minimal or extreme jealousy may occur. Shelf responsibly.




① Fasten Into All Studs & Blocking The Bracket Crosses




1.1 Studs are the vertical 2x4 boards that make up the bones of your walls. They provide solid structure for your brackets to attach to.


② Using Shims With Your Bracket



2.1 If your wall is not straight, use shims to ensure your bracket is installed straight across the wall face and square to the wall. The bench slab and bracket will properly mate only if the bracket is straight and plum.



1.2 Blocking is typically added later between studs in the wall for additional support to mount brackets to, and is usually made from 2x4 or 2x6 lumber.

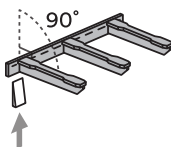

2.2 If your bracket continues to sag after correct install, use wood shims underneath the backbar to adjust front to back level.



1.3 For a contractor grade install with best substrate strength, install blocking along the length of your bracket.

Need a hand? Speak with a Shelf Geek at 949.244.1083 or hello@shelfology.com today.

How did we do? You'll get an email soon asking for a product review, and we'd be stoked if you oblige. You rock in advance!

Call	949.244.1083
Email	hello@shelfology.com
Shop	www.shelfology.com
Visit	156 N 2nd E Rexburg, ID 83440
Social	@shelfology

