

Shelfology
Certified Rad™
Designed & Crafted
By Radically Talented
Humans Right Here In
The U.S. Of Awesome_

→ Patent
✓ Pending
Design.

⚡ Lightning
→ Fast Lead
Times.

Wink Corner Shelf

Install Guide






Installation
Difficulty
Rating (1-10)



5

Table of Contents	Page
Installation Steps	004
Warnings	006
Rad Tips	007

Required Tools

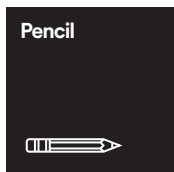

Optional Tools

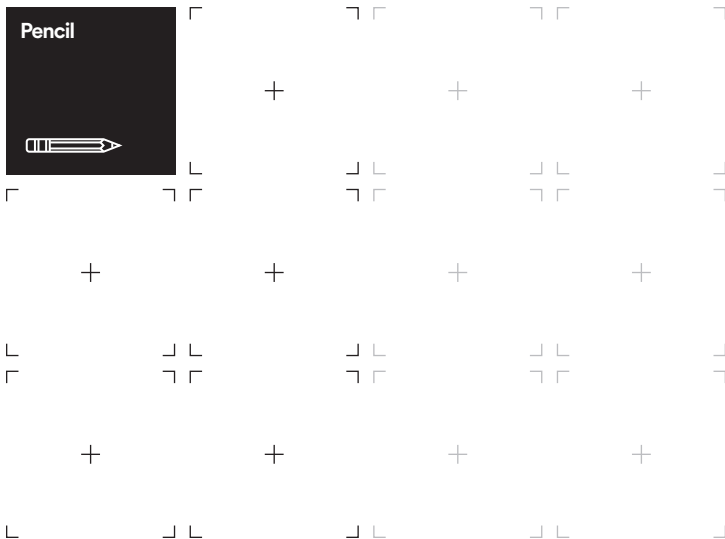
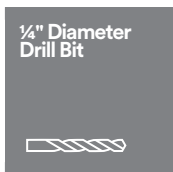





START ↓↓

Tuck your treasures into a corner-hugging piece that turns forgotten nooks into pure awesome. Designed & Crafted By Radically Talented Humans Right Here In The U.S. Of Awesome.

What's In The Box

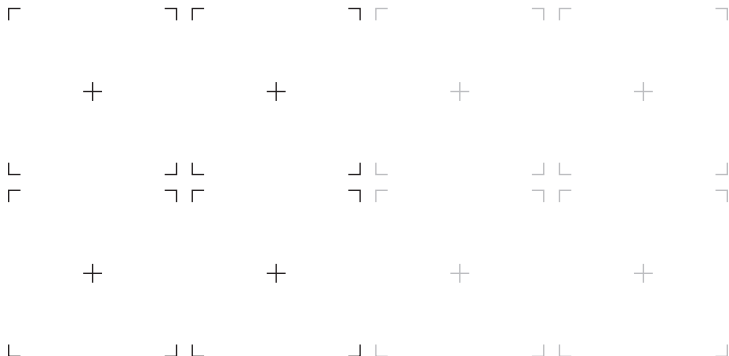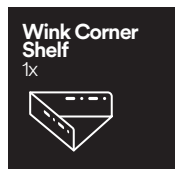

What You'll Need

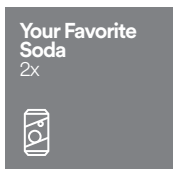


DESIGNED & CRAFTED BY RADICALLY TALENTED HUMANS RIGHT HERE IN THE U.S. OF AWESOME.

LIGHTNING FAST LEAD TIMES.




Installation Steps

001

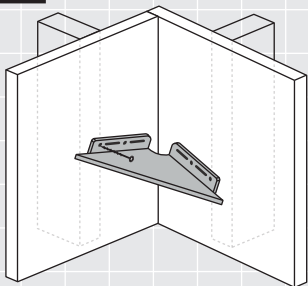


Yo! Here we go! Position your shiny new shelf in the corner of your wall with the fastener holes along the top edge. Use a drill to fasten either the far left or right hole to the wall in the desired location. For masonry installs, see **Rad Tip ③** on page 7.

002

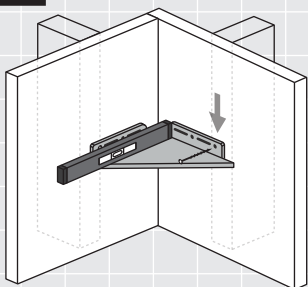

Level your shelf, then set another fastener in the opposite side with your drill. If you have installed blocking behind the full length of your shelf, **skip to step 6**. If you have not installed blocking, proceed to step 3. For more information on blocking, see **Rad Tip ①** on page 7.

003

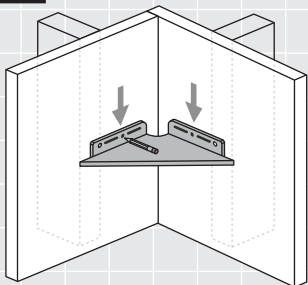

Double check the shelf position on your wall and adjust if necessary. Mark all fastener holes with a pencil. Once every fastener location has been marked, uninstall both fasteners and remove your shelf from the wall. Take a swig of your favorite soda or non-alcoholic brew.



004

Use a stud finder to locate any available studs behind the drywall. For all remaining fastener locations, use a 1/4" drill bit to predrill each drywall anchor location.

005

Install a drywall anchor in each of these pre-drilled locations. If you are using your own anchors, we recommend Toggler brand for best results. Stud locations should not be pre-drilled. Drywall anchors should be installed flush with the drywall surface.

006

Replace the shelf and install a fastener into every drywall anchor and stud location.

007

Snap the magnetic cover plate into place. Make a final inspection of your shelf. Check for shelf sag, confirm shelf is correctly secured to wall. See **Rad Tip** @ on page 7.

Stand back and relax, you did it! Give your cat a celebratory fist bump, if present. Gently place your Golden Girls™ box collection on shelf and admire!



Whoa, you made it! We are vicariously stoking for you right now. Post your sweet shelfie on Instagram now!



@shelfology
#radshelfie

Need a hand? Speak with a Shelf Geek at 949.244.1083 or hello@shelfology.com today.

How did we do? You'll get an email soon asking for a product review, and we'd be stoked if you oblige. You rock in advance!

Warnings



① Correct Install Required For Safe Use

1.1 Shelves must be correctly installed into studs or wall blocking. Failure to do so may result in sagging shelves, falling objects, or serious injury.

② Adhere To The Capacity Rating Of Your Specific Shelf

2.1 Every Shelfology shelf has been engineered for use with specific capacities. Failure to follow our specified capacity ratings may result in sagging shelves, falling objects, or serious injury. Please reference the Wink Spec Sheet for more information.


③ California Proposition 65 Warning

3.1 This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. Don't eat this shelf. If you live outside of California, do whatever you want. For more boring information, visit www.p65warnings.ca.gov.

④ Not For Use In Wet Environments


4.1 Powder coated carbon steel does not equal waterproof. If water has direct and constant contact with the shelf, like in a shower or outdoors, it will rust. Shelves installed in these conditions are not covered by our warranty.

① Fasten Into All Studs & Blocking The Shelf Crosses




1.1 Studs are the vertical 2x4 boards that make up the bones of your walls. They provide solid structure for your shelves to attach to.

② Using Shims With Your Shelf




2.1 If your wall is not straight, use shims to ensure your shelf is installed straight across the wall face and square to the wall.

③ Masonry Installation




3.1 Hold shelf in position and mark hole placements. Drill each marked location with a 1/4" diameter masonry drill bit. Drill at least 2 1/4" deep to allow for the 2 1/2" wall fastener.

④ How To Choose Your Fastener Type

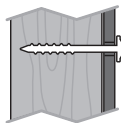


4.1 Truss Head: Use the supplied truss head style wood fasteners in areas that cross studs or blocking with holes and channels that are not countersunk.



1.2 Blocking is typically added later between studs in the wall for additional support to mount shelves to, and is usually made from 2x4 or 2x6 lumber.




3.2 Using a hammer, tap masonry anchor into hole, flush with wall surface.



4.2 Pan Head: For drywall or masonry, use the supplied pan head fasteners with the included drywall or masonry anchors.



1.3 For a contractor grade install with best substrate strength, install blocking along the length of your shelf.



3.3 Hold shelf in position, and install masonry fasteners into anchors.

Need a hand? Speak with a Shelf Geek at 949.244.1083 or hello@shelfology.com today.

How did we do? You'll get an email soon asking for a product review, and we'd be stoked if you oblige. You rock in advance!

Call	949.244.1083
Email	hello@shelfology.com
Shop	www.shelfology.com
Visit	156 N 2nd E Rexburg, ID 83440
Social	@shelfology

